

## Anchorage Connectors



## Beam Grips and BeamGlide™ Trolley

- Workman FP Stryder/Beam Grips attach to I-beam flange—no tools required
- BeamGlide Trolley provides horizontal mobility and keeps anchorage connector directly overhead—fits all beams

WORKMAN FP STRYDER	10144431 <b>1</b>	Workman FP Stryder Anchorage Connector, Standard version, fits beam flange widths from 4" to 13.5"
	10144432	Workman FP Stryder Anchorage Connector, XL version, fits beam flange widths from 14" to 23.5"
BEAM GRIPS	506682	BeamGrip for beams with flange width: 3.94" to 5.64" flange thickness: .205" to .659"
	415171	BeamGrip for beams with flange width: 5.525" to 8.07" flange thickness: .36" to 1.09"
	415172	BeamGrip for beams with flange width: 8.06" to 10.475" flange thickness: .56" to .935"
	415173	BeamGrip for beams with flange width: 10.265" to 12.8" flange thickness: .605" to 1.25"
	506643	D-Ring insert for BeamGrip
	506673	Swivel D-Ring
	10072789	506682 BeamGrip with swivel D-Ring
BEAMGLIDE TROLLEY	506266	BeamGlide Trolley, removable model (customer must provide specs)
	506252	BeamGlide Trolley, permanent model (customer must provide specs)
	506379	Trolley End Stops (pair)



## Roof Anchors

Available in permanent or reusable models, roof anchors provide an anchor point for personal fall arrest systems on roofs for maintenance work, repair, and new construction.

ROOF ANCHORS	10016468 <b>2</b>	Permanent roof anchor, 2" x 4"
	10017593	Permanent roof anchor, 2" x 6"
	10017594	Permanent roof anchor, 2" x 8"
	10017595	Permanent roof anchor, 2" x 10"
	10017596	Permanent roof anchor, 2" x 12"
	416068 <b>2</b>	Temporary roof anchor, 3-pack
	10102686 <b>1</b>	Workman reusable roof anchor