

This genuine item is supplied by the original equipment manufacturer for use with Ridgid pipe and bolt threading machines. The sine bar fits between the return spring and the sine bar spacer. During the installation process, a set of pliers might be needed to replace this part. It will need to be replaced if it breaks. This item is available as an individual replacement part.